

Parts and Accessories

How to Operate Manual Arm Systems



Step 1.

Unwrap the rope from the rope hooks on the front of the truck. Next flip the rope over the corner of the truck body.




Step 2.

Using the rope, pull the arms up and over the load. After deploying the tarp secure the rope to the rope hooks at the rear of the truck body.



Step 3.

To retract, untie the rope and pull the rope around the corner of the truck body. Start the arms back by hand until the spring tension in the roller takes over to retract the tarp all the way.

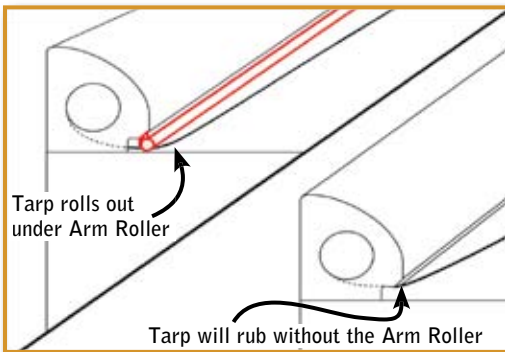

Super Shield Arm Roller

The Arm Roller kit is easily added to a standard Super Shield system. The Arm Roller is required for Super Shield Manual & Automatic Arm Systems.

Part # 501-070X
Specify housing width when ordering.



Tarp Tamer

When your system is mounted above the side rails the Tarp Tamer's fixed roller holds the front of the tarp down to prevent material from blowing out. The Tarp Tamer can be used with Pulltarps®, Manual Arms, and Automatic Arm systems.

Part # 501-0701



Bent Arms and Extensions

Bent arms will stay out of harms way while loading. This will increase the life of your tarp system's arms. Extensions can be added to straight arms as an upgrade. Bent Extensions are available in 25°, 35°, and 45° degree bends.

Part # 501-12XX