

Details of Manual Arms



Full Line of Tarp Housings to choose from.

End Caps

The fiberglass reinforced nylon end caps provide friction free operation even in subzero temperatures. Lasts longer than bearings because they're not affected by salt, moisture or grit.

Spring

The Spring is plated to resist corrosion and has a lifetime guarantee.

Galvanized Roller Tube

Easily remove or install any tarp. Just slide the tarp into or out of the groove on the roller tube.

Grommets

Come standard on all tarps.

Mounting Plate

The Steel Mounting Plate is bolted to aluminum bodies and can be welded or bolted to steel bodies.

Urethane Bushings

The Urethane Bushings provide smooth operation, absorb shock and are not affected by salt, moisture or grit.

Standard Arm Tubing

Arms are made of common fence pipe or aluminum tubing. This allows for easy and inexpensive repairs in the field.

