



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Related Instructions,
How-To Videos & More



[PDF: Optional Tarp Tamer](#)



[PDF: Optional Tarp Tamer Bow](#)



[PDF: Deluxe High Amp Switch - 12Volt](#)




[PDF: Cab External Switch - 12 Volt](#)



[PDF: 12V Smart Switch w/ External Switch](#)

501-0713, 501-0714, 501-0731, 501-0759, 501-0760,
501-0761, 501-0762, 501-0763, 501-0764, 501-0765,
501-0784, 501-0785, 501-0786

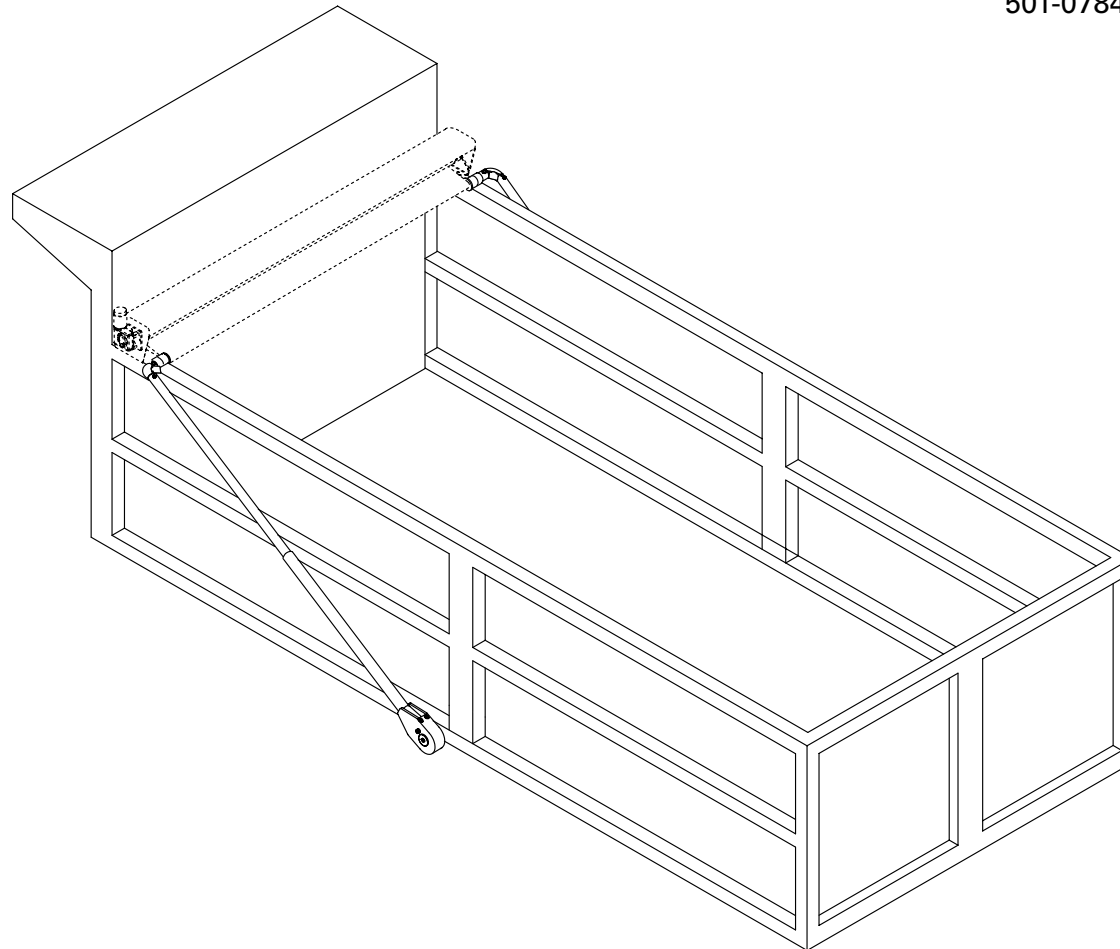

Document #: 607-0110
Revised: 10/21/25 WLH

DURING INSTALLATION, SOME FABRICATION MAY BE REQUIRED.



A Roll-Rite Brand



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Table of Contents

Tools, Diagrams & Parts

Recommended Tools	2
Single Spring Pivots with Steel Arms #501-0713, 501-1763	3
Single Spring Pivots w/Aluminum Arms #501-0714, 501-0731, 501-1764, 501-1765 (No Wire) #501-0764, 501-0765, 501-0785, 501-0786 (With Wire 90' & 100')	4
Single Spring Housing Assembly #501-1101 (Driver-Shown), #501-1102 (Pass.- Opposite)	5

Installation

Determining the Pivot Points and Mounting Locations	7
Arm Alignment, Tarp and Pullbar Installation	8
Quick Disconnect Plug Assembly	9
Optional Flap Tarp, Rope and Hook Installation	10
Bungee Cord Installation	11
Flap, Rope and Rope Hook Placement	12

PULLTARPS


®

A Roll-Rite Brand



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

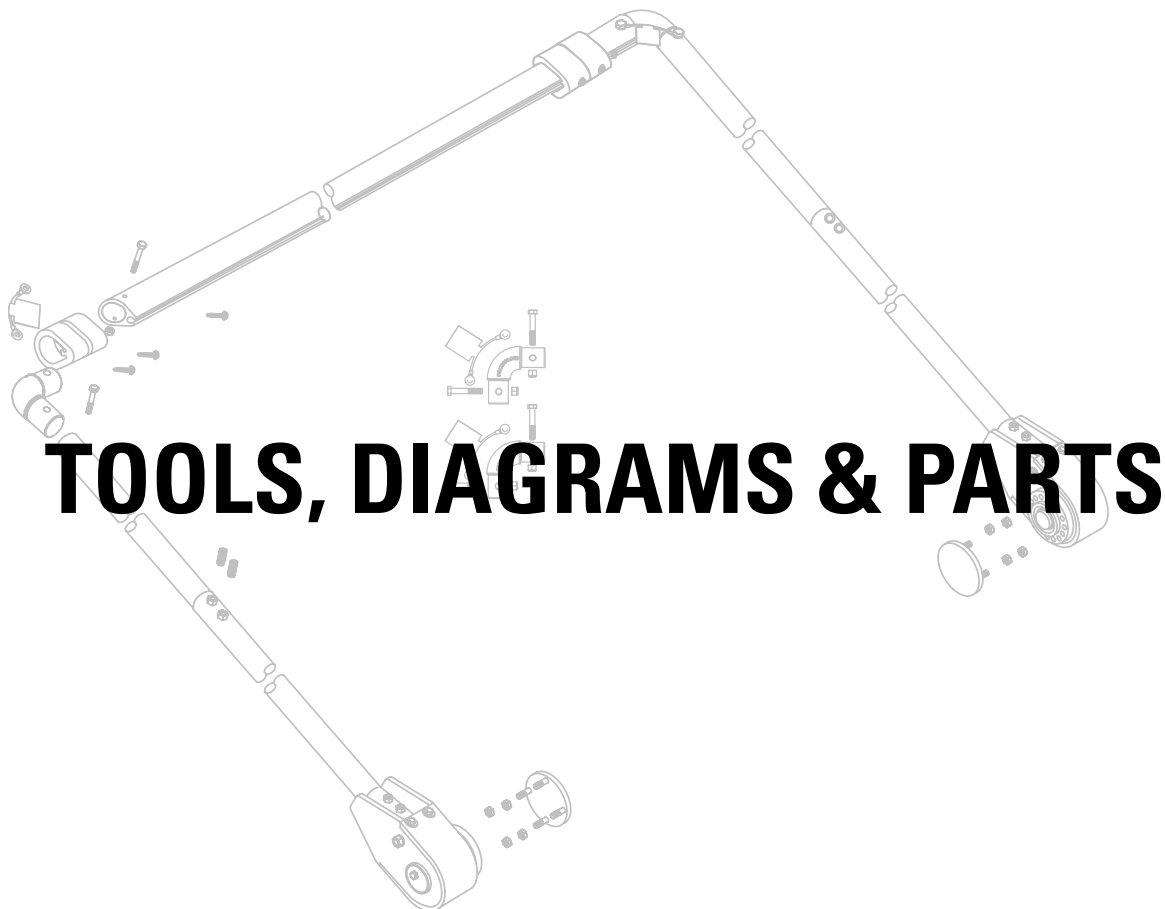



A Roll-Rite Brand



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits


Recommended Tools




Safety Glasses and Gloves



Welding Equipment & Helmet

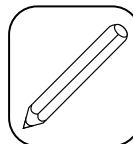


Pencil or Marker

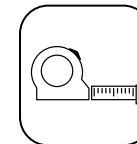


Tape Measure




Adjustable Wrench

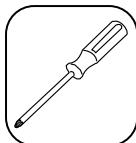

Philips Screwdriver

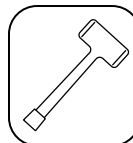


Mallet or Deadblow Hammer

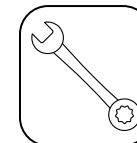


3/4" Box Wrench



Socket Wrench

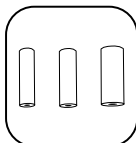

3/4", 7/16" & 5/16" Sockets

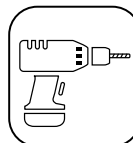


Impact Drill (Optional)



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Single Spring Pivots with Steel Arms #501-0713, 501-1763

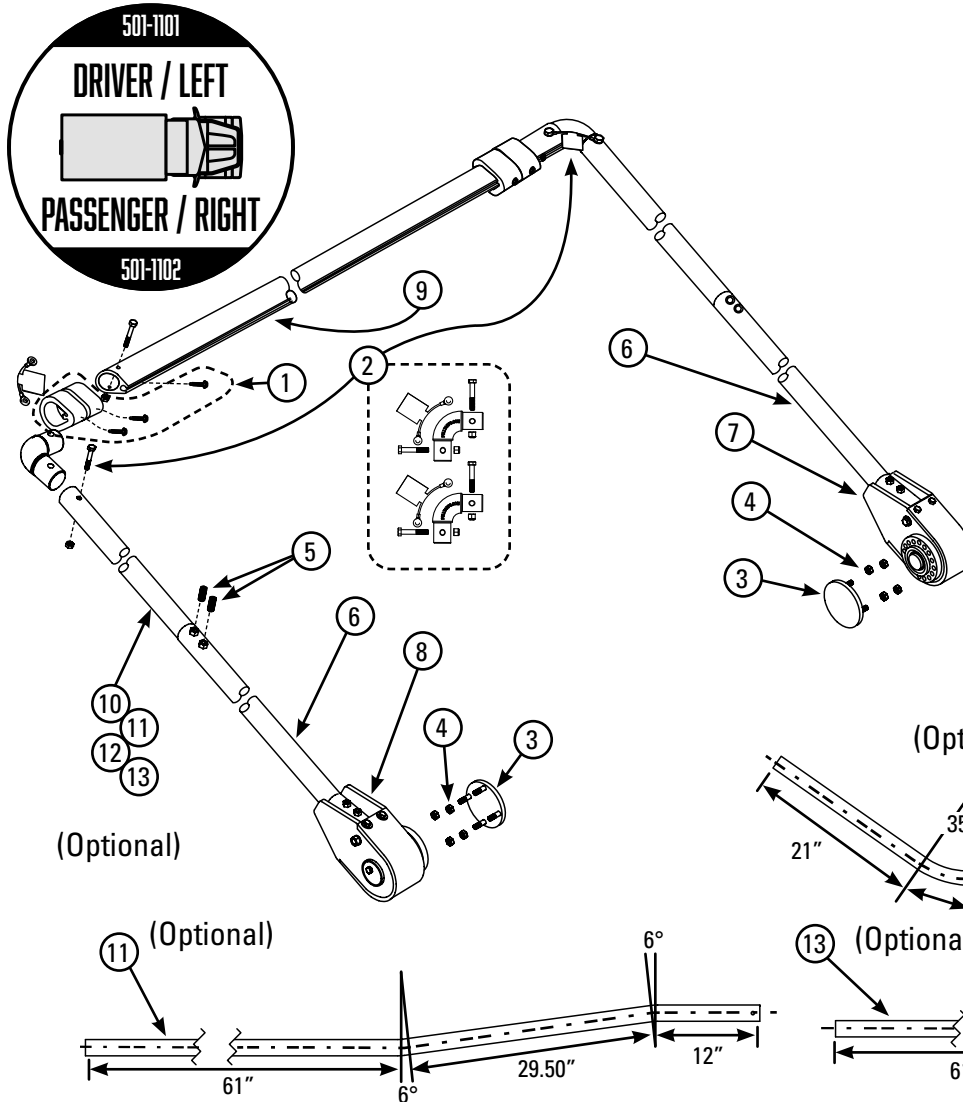

ITEM	PART #	DESCRIPTION	QTY
1	501-1293	Teardrop Bumper Kit	1
2	501-1251	Elbow Kit (For Steel)	1
3	501-2237	4" Arm Adaptor Plate Assembly	2
4	504-3705	3/8" - 16 Nyloc Nut (Thin)	8
5	506-5008	1/2" - 13 x 3/4"lg. Set Screw	4
6	501-1201	Lower Arm with Nuts	2
7	501-1101	Single Spring Housing (Driver)	1
8	501-1102	Single Spring Housing (Passenger)	1
9	501-0430	Universal Teardrop Pullbar	1
--	514-0213	6Ga. Electric Wire	90'

Arm Options

ITEM	PART #	DESCRIPTION	QTY
10	501-1202	Steel Upper Arm Tubing	2
11	501-1204	Offset Upper Arm Tube	2
12	501-1205	Upper Arm Tubing, Drilled and Bent	2
13	501-1207	Offset Upper Arm Tube	2


REV. 09/05/25 WLH



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Single Spring Pivots w/Aluminum Arms #501-0714, 501-0731, 501-1764, 501-1765 (No Wire) #501-0764, 501-0765, 501-0785, 501-0786 (With Wire 90' & 100')

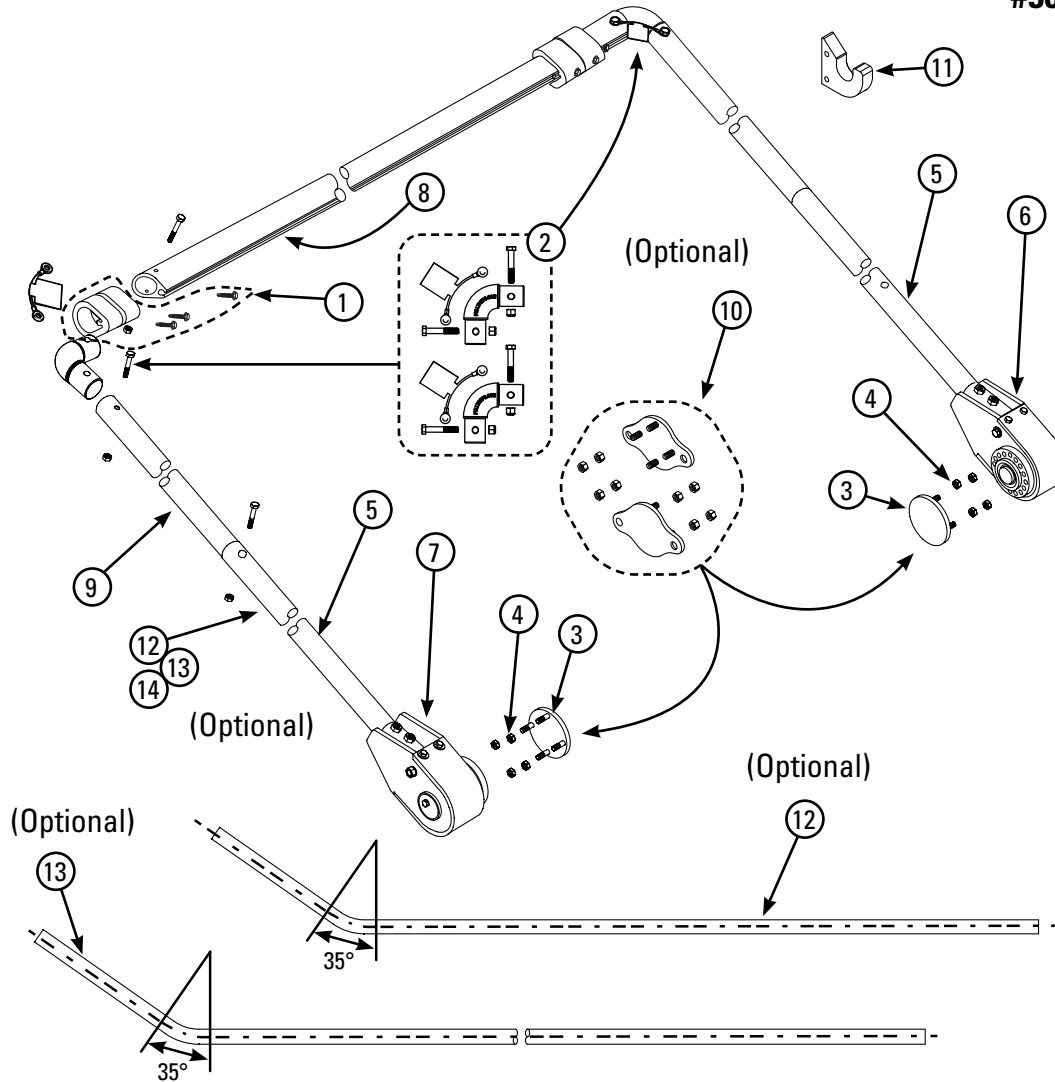


ITEM	PART #	DESCRIPTION	QTY
1	501-1293	Teardrop Bumper Kit	1
2	501-0791	Elbow Kit (For Alum. with Teardrop)	1
3	501-2237	4" Arm Adaptor Plate Assembly	2
4	504-3705	3/8" - 16 Nyloc Nut (Thin)	8
5	501-1209	103" Aluminum Lower Arm Tube	2
6	501-1101	Single Spring Housing (Driver)	1
7	501-1102	Single Spring Housing (Passenger)	1
8	501-0430	Universal Teardrop Pullbar	1

Options

ITEM	PART #	DESCRIPTION	QTY
9	501-1211	Aluminum Upper Arm or Pullrod	2
10	501-2235	EZ-Mount Assembly	2
11	501-1247	Arm Catcher Assembly (Optional)	1
12	501-1214	Upper Arm Tubing, Drilled and Bent	2
13	501-1216	Aluminum Upper Arm Tube Bent - 12'	2
14	501-1212	Aluminum Upper Arm Tube - 12'	2

REV. 09/05/25 WLH

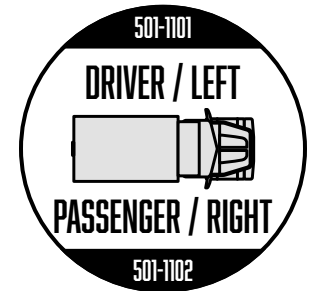




INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Single Spring Housing Assembly #501-1101 (Driver-Shown), #501-1102 (Pass.-Opposite)

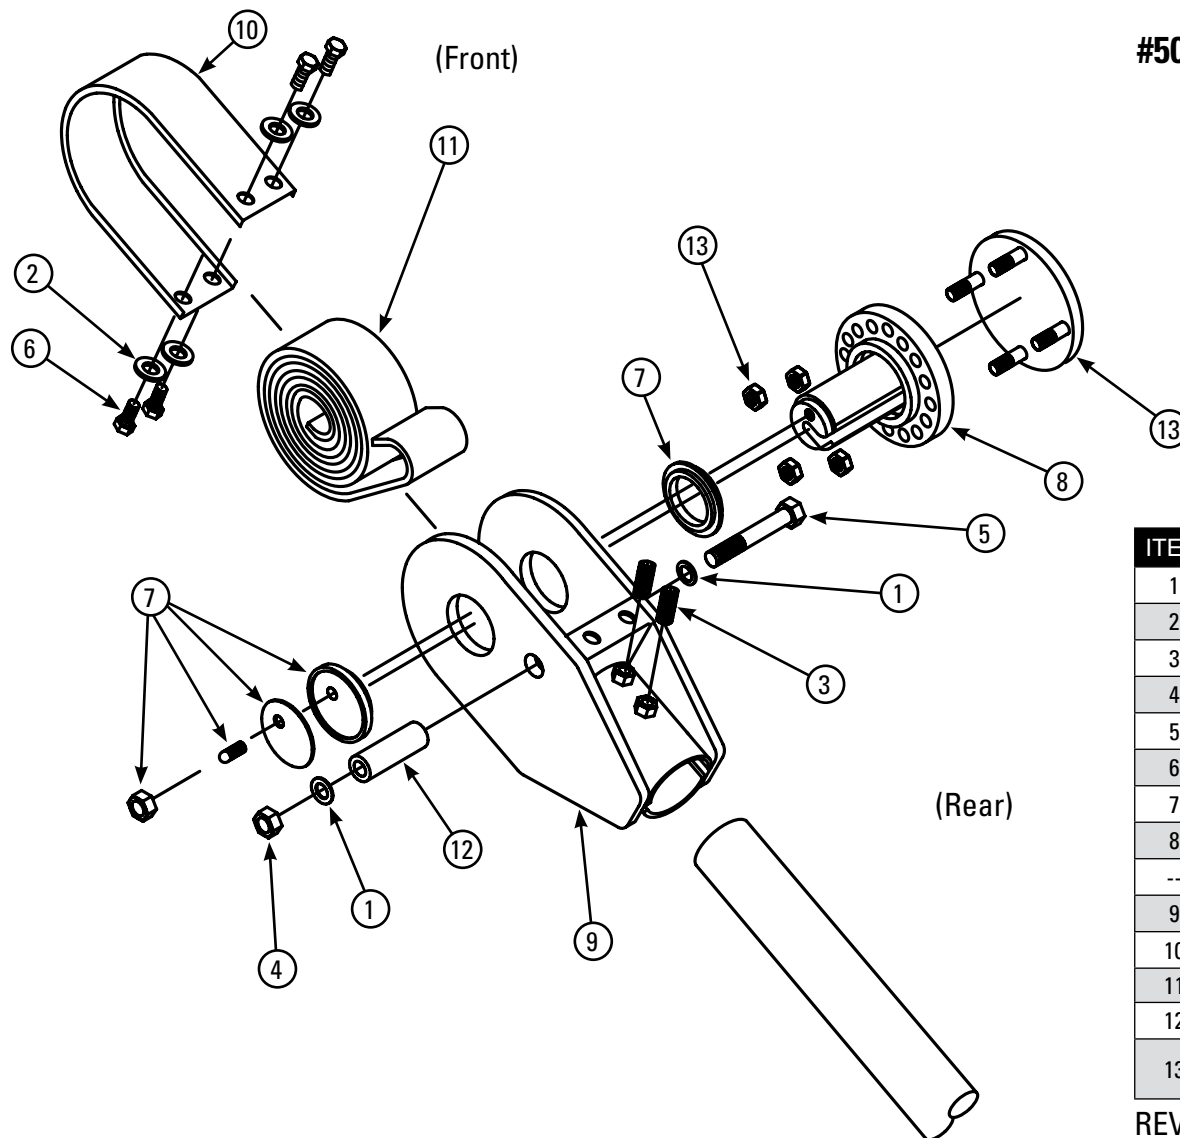

ITEM	PART #	DESCRIPTION	QTY
1	505-5001	1/2" AN Flat Washer	2
2	505-2502	1/4" Flat Washer USS	4
3	506-5008	1/2" - 13 x 3/4" Set Screw	2
4	504-5004	1/2" - 13 Nyloc Nut	1
5	503-5011	1/2" - 13 x 3-1/4"lg. HHCS Bolt	1
6	503-2503	1/4" - 20 x 1/2"lg. HHCS Bolt	4
7	501-1181	Bushing Kit	1
8	501-1119	Pivot Assembly (Driver)	1
--	501-1120	Pivot Assembly (Passenger-Not Shown)	1
9	501-1109	Spring Side Plate Assembly	1
10	501-1151	Arm Dust Cover	1
11	501-1156	Rolled Spring Assembly with Strip	1
12	501-1158	Spring Connection (Arm System)	1
13	501-2237	4" Arm Adaptor Plate Assembly (Not part of Kit - Must be ordered separately.)	1

REV. 10/13/16 WLH




A Roll-Rite Brand



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

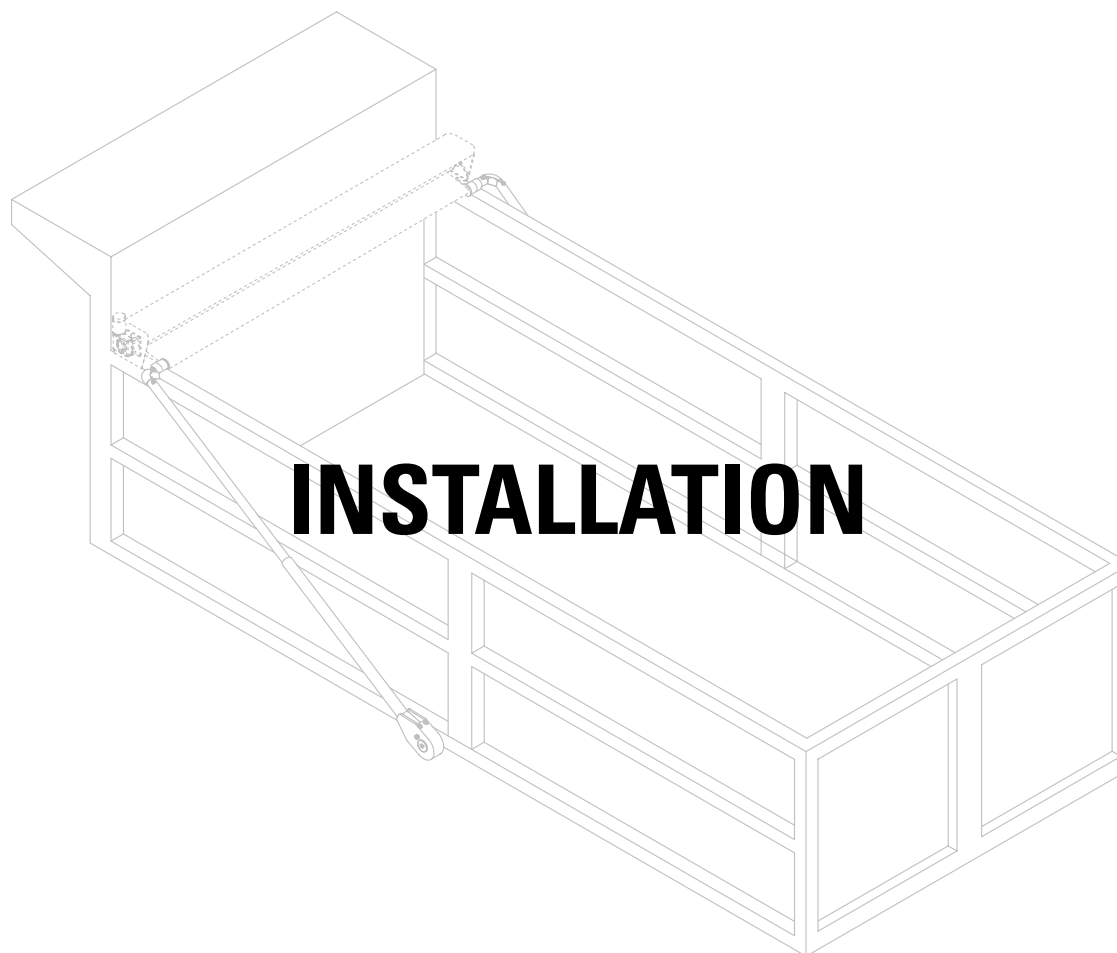




INSTALLATION INSTRUCTIONS


Single Spring Arm Kits

Determining the Pivot Points and Mounting Locations

Step 1 - Mounting Positions: Locate the proper mounting positions by determining Point "A" and Point "B" and insuring measurement "D" and "E" are equal (Fig. 1). Point "C" must be located as low as possible. Mark pivot location.

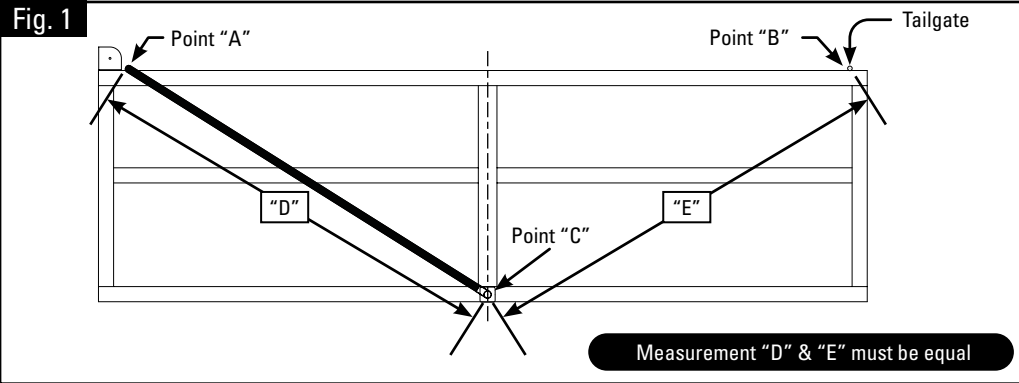


Step 3a. Arm Preload (for boxes over 22' in length): Install Arm and Pivot assemblies on Arm Adaptor Plate with Arm indexed (Fig. 3A). Arms must be indexed with no spring load on pivots. Index Arms at 180 degrees of travel from the Roller Mechanism for proper preload of the springs.

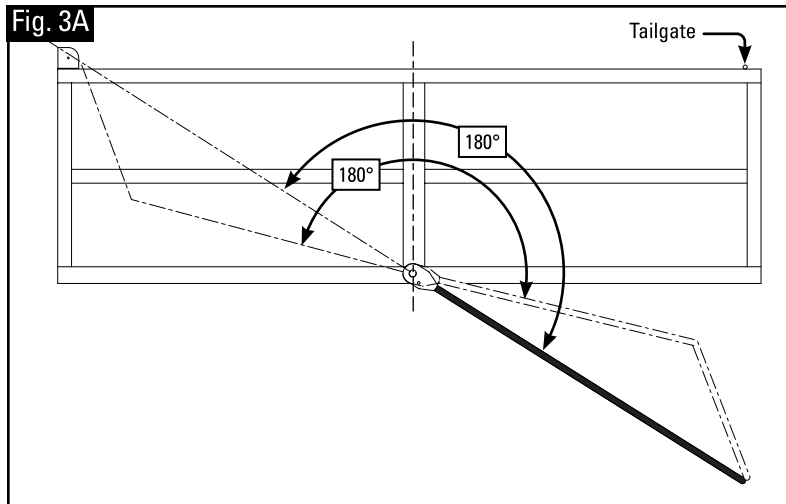


Index Arms at 180 degrees of travel from the Roller Mechanism for proper preload of the springs. The dotted lines represent proper 180 degree preload position for applications with Bent Arms. Mark pivot pin location on box.

Step 2 - Mounting the Pivot: For Single Springs pivots weld or bolt the Arm Adaptor Plate in place (Fig. 2).

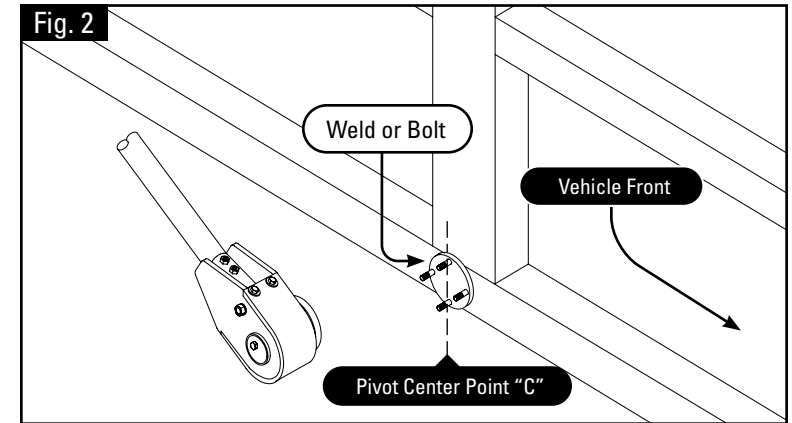

Step 3b. Arm Preload (for boxes under 22' in length): Install Arm and Pivot assemblies on Arm Adaptor Plate with Arm indexed (Fig. 3B). Arms must be indexed with no spring load on pivots. Index Arms at 150 degrees of travel from the Roller Mechanism for proper preload of the springs. The dotted lines represent proper 150 degree preload position for applications with Bent Arms. Mark pivot pin location on box.

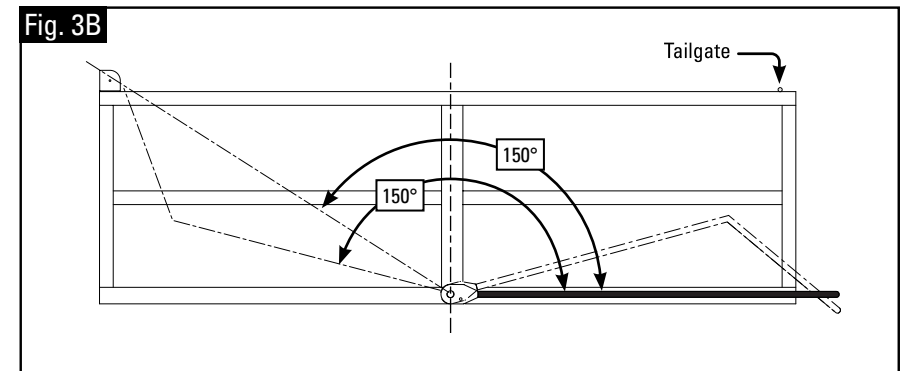




INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Arm Alignment, Tarp and Pullbar Installation

Fig. 4

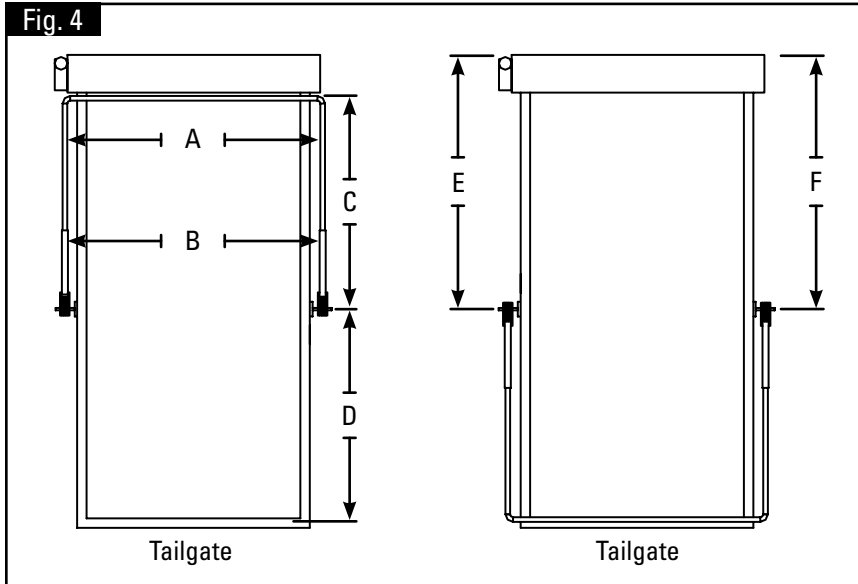


Step 4 - Correct Alignment of arm to truck:

Arms and pivots must be square and parallel to truck (Fig. 4).


(Dimension "A" must equal "B" - Dimension "C" must equal "D" - Dimension "E" must equal "F")

Fig. 5

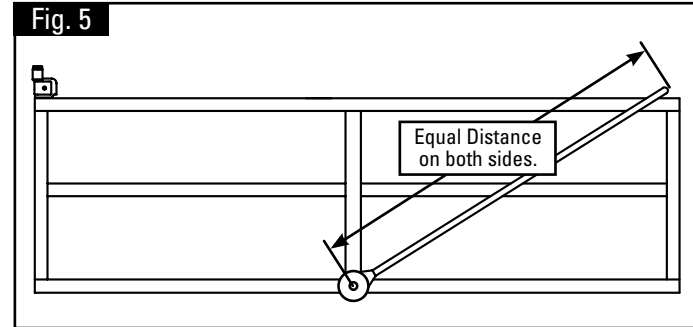

Step 5: Adjust the Arms on both sides to be the same length (Fig. 5).

Fig. 6

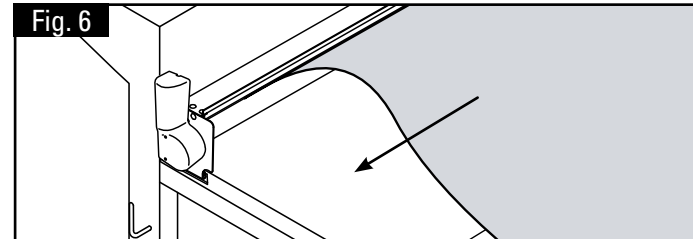

Step 6 - Tarp Installation: Slide Tarp into Groove on roller tube and center (Fig. 6).

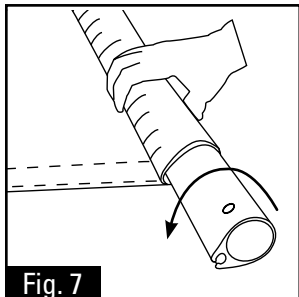


Fig. 7


Step 7 - Installing The Pullbar:

Cut the pullbar to length making sure the arms remain parallel and square to the body.

Slide the tarp into groove in the pullbar and center the tarp.

Roll the tarp up on the pullbar two revolutions (Fig. 7).

Fig. 8

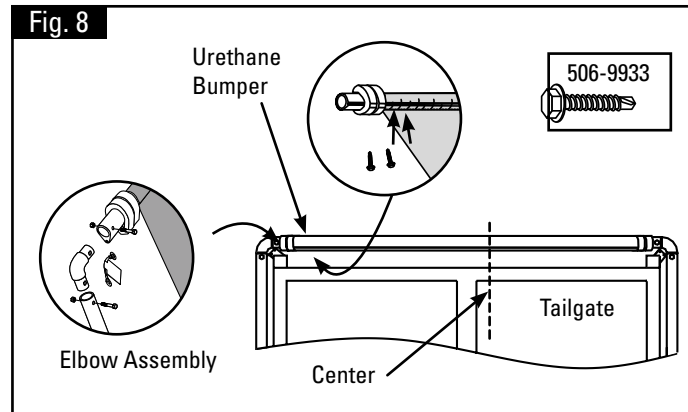

Step 8: Fasten the tarp in place by sliding the two urethane bumpers on to the pullbar far enough to touch the edges of the tarp. Lock in place by installing a 1-1/2" long (506-9933) self drilling screw through the bumper and into the hem tube groove of the pullbar (Fig. 8).

For elbows, use the long bolts provided in the kit, when deployed to catch the rope on flap tarps. Install tether onto elbows as shown.

Note: Tarp must be retracted when dumping.



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Quick Disconnect Plug Assembly

Step 9: Assemble the Quick Disconnect (Fig. 9, 10 & 11).

Option #1, Plug Assembly - Part # 514-0505.

Fig. 9



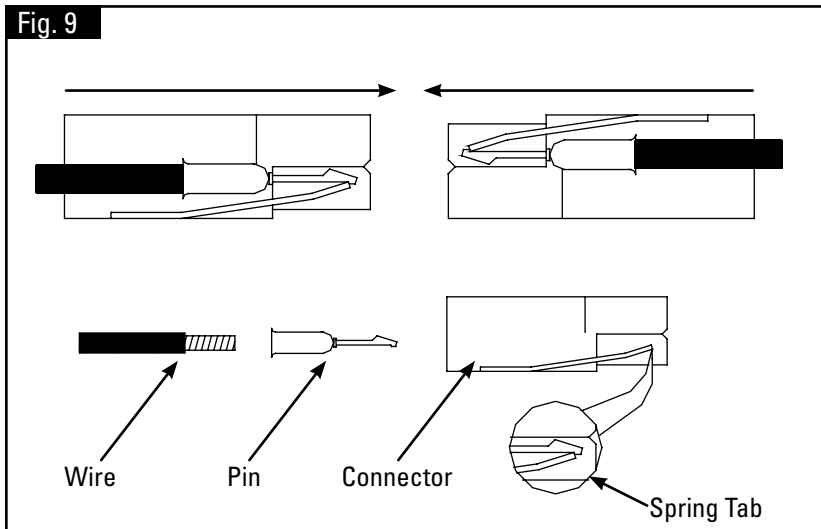


Fig. 11

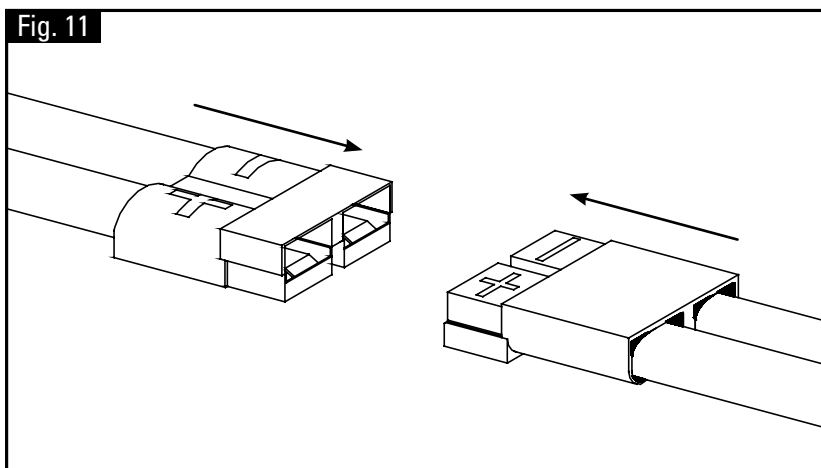

Option #2, Plug Assembly - Part # 514-0501.

Fig. 10

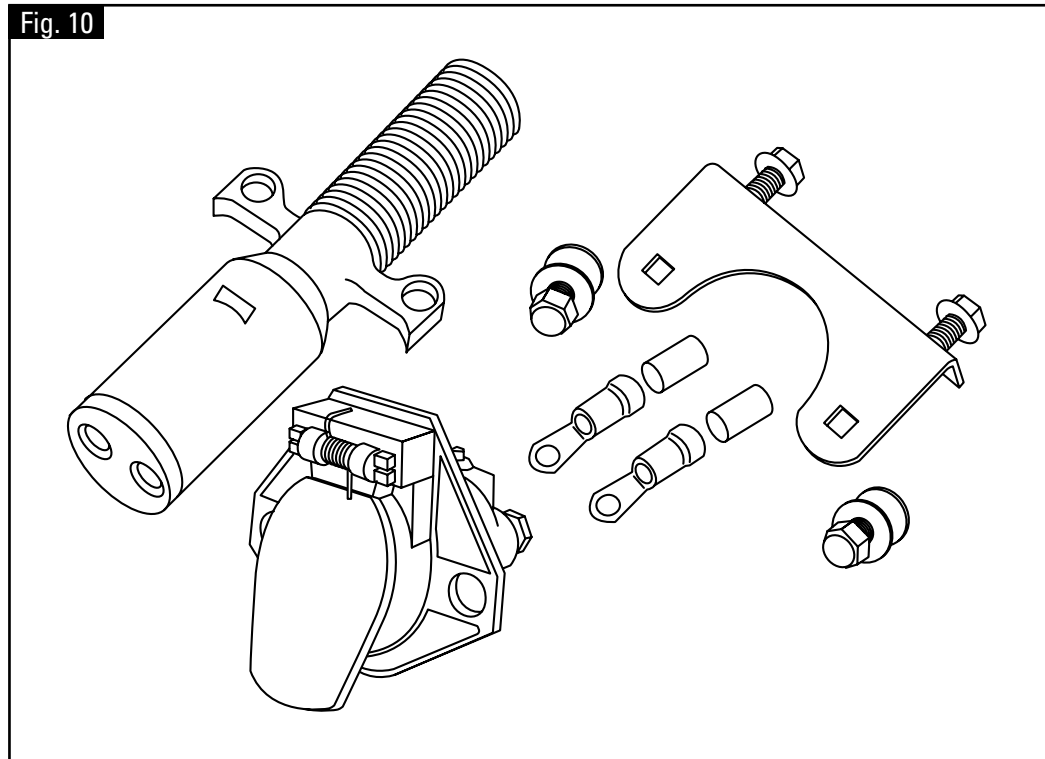



INSTALLATION INSTRUCTIONS


Single Spring Arm Kits

Optional Flap Tarp, Rope and Hook Installation

Parts:

Tie Down Hooks (Steel or Alum.)

Pull Down Hook



Note: The Location Of The Tie Down Hooks Is Critical!






Step 1: Flip the braided rope over the corner so that the flaps and tie down ropes hang over each side of the box. The number of tie down hooks vary depending on the length of your tarp. One pull down hook is included with your Pulltarp system. If needed. Use the hook to pull the braided rope and flaps over the side of the box.

The tie down hooks must be positioned so that:

1. The tie down rope can be reached from the ground.
2. The bungee cord has to be stretched to reach the last hook (see Step 2 in **Bungee Cord Installation** section).
3. The rope has no slack.
4. The tie down hooks are level with one another.

To ensure proper hook placement, first duct tape the rope to the box in place of the tie down hooks. Start with hook closest to the cab.

1. Position the first hook 6" (15.24cm) down and 12" (30.48cm) forward (toward the cab) from the first grommet (Fig. 12).
2. Position 2nd hook straight down from 1st grommet. This hook should be reached from ground (Fig. 13).
3. Place middle hooks equal distances from grommet (Fig. 14). These hooks should be placed at the same height as the second hook.
4. Position last hook (closest to the tailgate) below the last grommet at the same height as the others (Fig. 15).
5. Weld hooks in place.

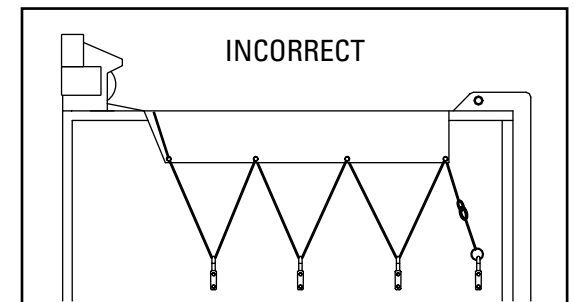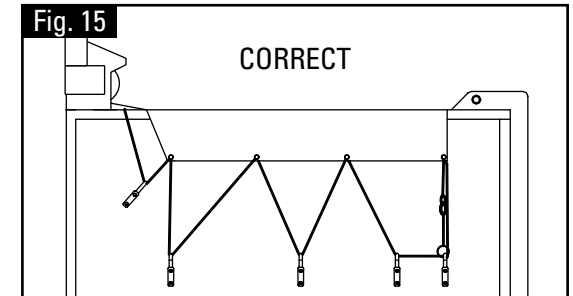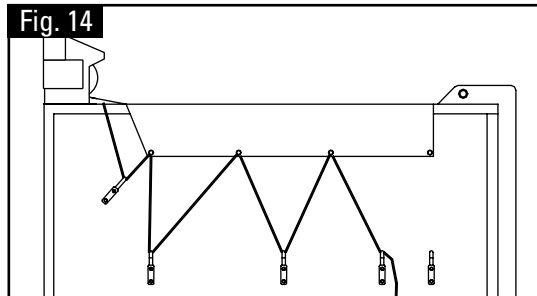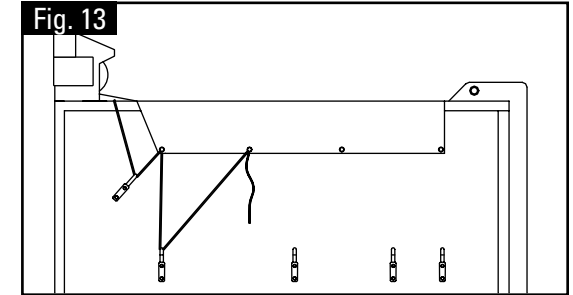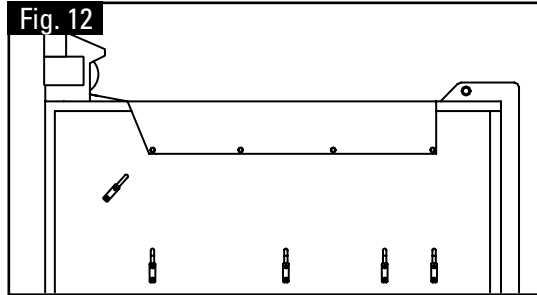




INSTALLATION INSTRUCTIONS

Single Spring Arm Kits


Bungee Cord Installation

Parts:

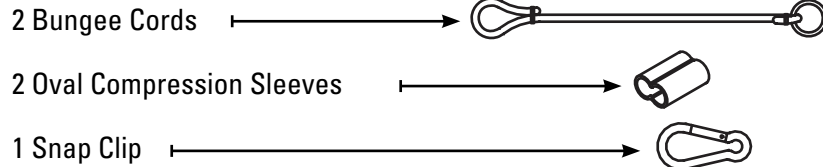

Step 2: After side hooks are installed, the tie down rope must be installed and cut to proper length. It is important to get all of the slack out of the rope to prevent blowing and rubbing of flaps in windy conditions.


Tarps with Side Flaps

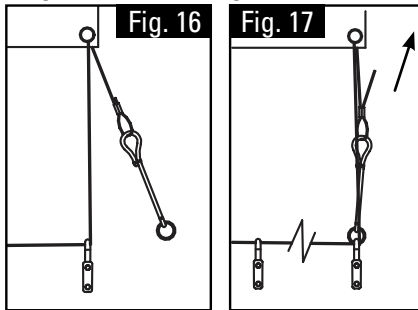

To tighten, pull loose end of rope through the Oval Compression Sleeve (Fig. 16). Stretch the bungee cord making sure all slack is taken out of the rope, crimp compression sleeve (Fig. 17). Be sure to keep flaps even on sides so Tie Down Ropes remain equal in length.


Note: Check for proper placement of rope through the last two hooks.

Snap Clip Installation

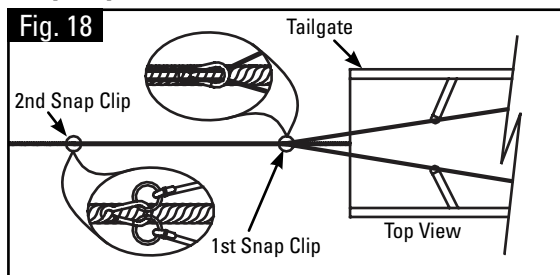

Note: First snap clip should not be used on long wheel base belly dumps.


Flip the rope back on top of the tarp, making sure to hold the bungee at all times. The first snap clip is factory installed 5'-6" from the pullrod. Open the clip and enclose the rope. Weave the second clip through the main pullrope where the ends of the bungee cords meet the main pullrope. Make sure the rope is taught when clipped (Fig. 18).

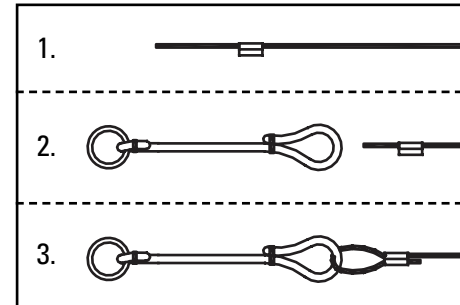

Connect Bungee Cord to Rope

1. Thread braided rope through Oval Compression Sleeve.
2. Feed rope through the eye of the bungee cord.
3. Thread the rope back through the oval compression sleeve. Adjust for proper length. Crimp compression sleeve.

Excess Rope

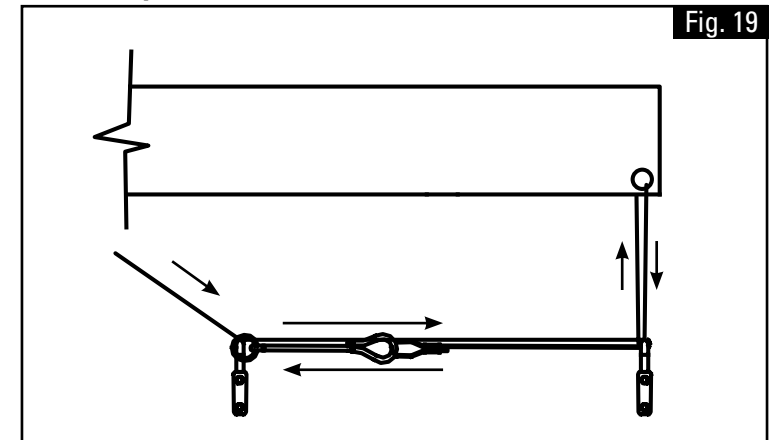

You may need extra rope to keep the side flap system ground operated. If your application requires extra rope, the slack needs to be taken up by a taching the end of the bungee cord to an alternate hook (Fig. 19).



INSTALLATION INSTRUCTIONS

Single Spring Arm Kits

Flap, Rope and Rope Hook Placement

Step 3 - Flap / Tie Down Rope Placement and Installation (Fig. 20).

Fig. 20



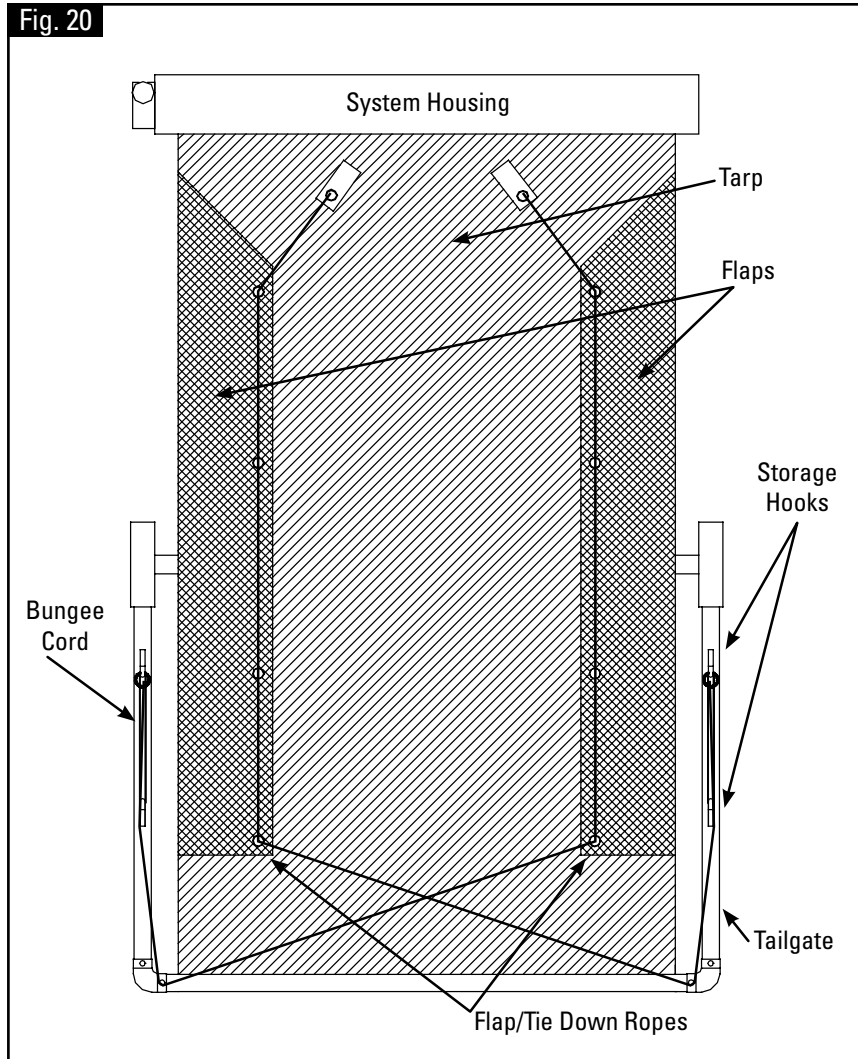


Fig. 21

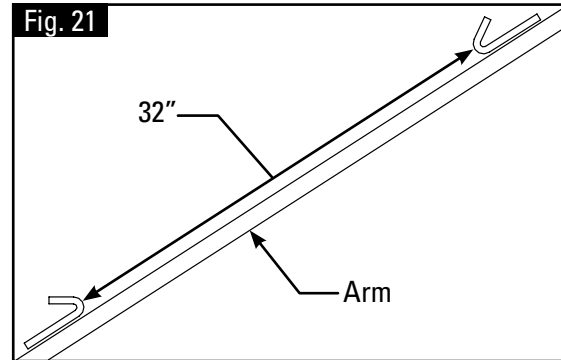


Step 4 - Rope Hook Placement: Weld rope storage hook on the top of the arms approx. 32" apart (Fig. 21).

Fig. 22

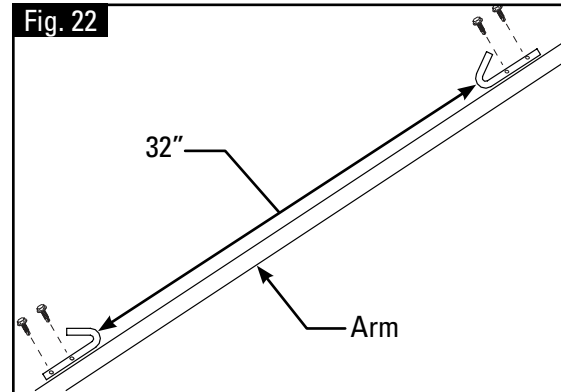

Step 5 - Rope Hook Placement For Aluminum Arms: Use Self Drilling screws (part #506-9933) to install hooks (Fig. 22).

Fig. 23

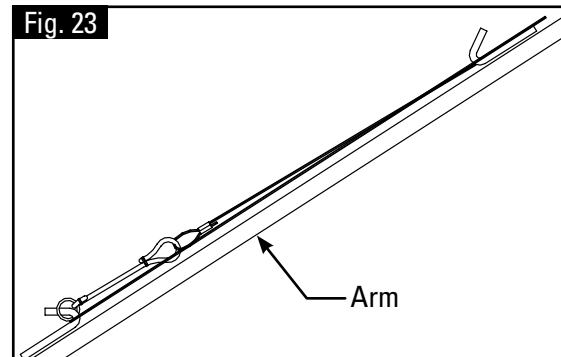

Step 6 - Rope storage on Arms: (Fig. 23).